# INSTRUCTION MANUAL

## PM750D, PM755D

### **Capacitive Sensor – Process Monitor**

Measurement Systems from LION PRECISION

Lion Precision • A Division of AQT, Inc. • 563 Shoreview Park Road • St. Paul, Minnesota 55126-7014 Telephone: 651-484-6544 • Fax: 651-484-6824 • www.lionprecision.com Copyright © 1994-2007 All Rights Reserved • Document # M014-1450.11

#### Introduction

The LION PRECISION PROCESS MONITOR (PM750, PM755) is an electronics module and probe combination which measures the distance between the probe and a conductive target or the amount (thickness) of a nonconductive material. The output can be configured to provide  $\pm 10V$  analog voltage or a switched NPN or PNP open collector transistor which switches when the analog voltage crosses zero volts.

The system is available with or without a steel mouting frame and also as a stacked system of synchronized PCBs.

#### Mounting

#### Mounting with steel frame

Use four #6-32 screws to secure the frame in position.


#### Mounting without steel frame (PCB only)

Use #4 or #6 screws (or similar) through the mounting holes in the PCB to secure the board(s) in position.

#### Mounting the probe

Mount the probe within measurement range of the target.

The probe must be securely mounted. Any variance in the probe postion will appear as changes in the target. The closer the probe is to the target, the greater the output sensitivity. Usually, closer is better.

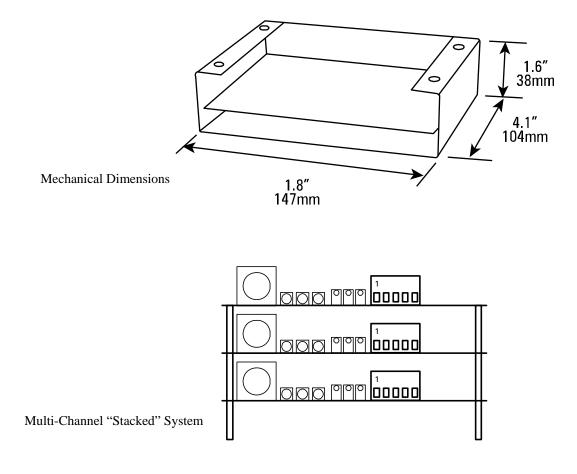

#### Connections

#### Input power

Three versions are available: ±15VDC, 115VAC, 220VAC

Synchronized, multiple channel systems built as "stacks" must have DC power supplied to each PCB individually.

#### $\pm 15 VDC$



/	J9-1	-15VDC, 150mA max.
	J9-2	+15VDC, 45mA max.
	J9-3	Ground
	J9-4	Output (Digital and Analog)
	J9-5	PNP Power In

0

Ο

00000

Power Transforme r


4 () () 2 3 () () 1

000

0

0

#### 115/220VAC

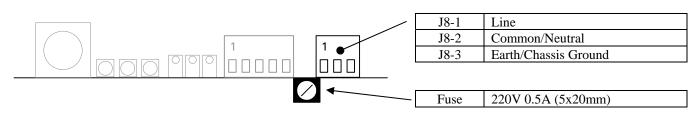


#### **Voltage Conversion**

Soldered-in wires convert between 115VAC and 220VAC.

115VAC – Solder wires between points 1 & 2, points 3 & 4.

220VAC – Solder wire beween points 2 & 4.

#### **Output Signal**

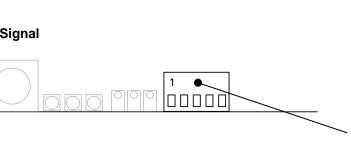

•	J9-1	-15VDC, 150mA max.
	J9-2	+15VDC, 45mA max.
	J9-3	Ground
	J9-4	Output (Digital and Analog)
	J9-5	PNP Power In (see page 4)

#### Configuring the output

Jumpers configure the output connection to provide either an analog  $\pm 10V$  output or open collector NPN or PNP switched output. The NPN/PNP outputs switch when the analog voltage crosses zero volts. The outputs can be further configured to have a positive or negative correlation to the target behavior.


Warning:

A shorting strap must be on EITHER JP4, or JP5 but NEVER BOTH.

#### **Analog Output Configuration**

- Remove shorting strap from JP5
- Add shorting strap to JP4 according to table below


JP4, Ana	JP4, Analog Output Confiuration	
1-2	Positive output	
	As probe approaches target or	
	nonconductive material increases in	
	quantity or density the output voltage	
	becomes more positive	
2-3	Negative output	
	As probe approaches target or	
	nonconductive material increases in	
	quantity or density the output voltage	
	becomes more negative.	

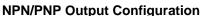

- Remove shorting strap from JP4
- Add shorting strap to JP5 according to table below
- Set output polarity with JP2 according to table below
- Maximum current through outputs is 200mA
- When using PNP, PNP Power In (J9-5) is required (details next page)

JP5, NPN/PNP Select	
1-2	NPN
2-3	PNP

JP2, NPN/PNP Polarity		
1-2 (NPN)	Analog voltage > 0VDC = "0" or "Low" output	
1-2 (PNP)	Analog voltage > 0VDC = "1" or "High" output	
2-3 (NPN) Analog voltage > 0VDC = "1" or "High" output		
2-3 (PNP) Analog voltage > 0VDC = "0" or "Low" output		

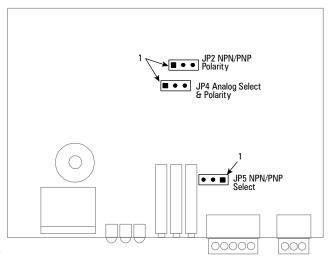



#### **PNP Power In**

The PNP transistor requires a power input connection (J9-5). This input power is connected to the PNP emitter and provides the voltage which will appear at the output when the PNP output is switched to "high." This is usually connected to the +15VDC connection on J9-2 but can be connected to an external power source up to 40VDC. See schematic below.

#### **Pull-Up Resistors**

Removable internal pull-up (pull-down) resistors are provided for the NPN and PNP output transistors. The NPN output is pulled up to +15VDC and the PNP output is pulled down to 0VDC. Both resistors are 3K. These resistors can be removed if required for proper installation and operation of the system. See schematic below.

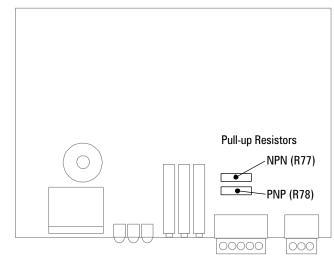

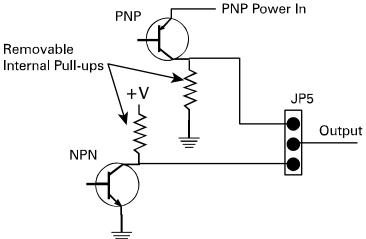

#### **LED Indicators**

The LEDs provide an approximation of the analog 1 output voltage: Under -1VDC the Far red LED is on. Between  $\pm 1$ VDC, the green LED is on. Over +1VDC the Near red LED is on. Far, Red Near, Red Zero, Green < -1V > +1V+1V to -1V **Adjustments** There are three adjustments: 1 Coarse Zero, Fine Zero, and Scale (Gain). The Zero adjustments add a DC offset to the analog output voltage. The Scale adjustment sets the sensitivity. Sensitivity is the amount of voltage change Coarse Zero Scale (Gain) corresponding to a given change in the conductive Fine Zero target position or nonconductive target quantity.

The specific application will determine the specifics of the adjustment procedure.

#### Typical adjustment for analog voltage output:

- 1. Set the target to a nominial condition.
- 2. Adjust output to zero with Coarse and Fine Zero adjustments.
- 3. Set the target to a maximum or minimum condition.
- 4. Use Scale adjustment to Adjust output to desired voltage (10V typically).

#### Typical adjustment for NPN/PNP output:

The PNP/NPN outputs switch at zero volts. Typical adjustments keep the good target condition on one side of zero and the bad target condition on the other side of zero. The following setup assumes the good condition causes the analog voltage to be more positive.

- 1. Set the target to a condition very near the desired switch-point.
- 2. Adjust output to 0V with Coarse and Fine Zero adjustments.
- 3. Set the target to a known good or bad condition.
- 4. Adjust output to 2V or greater with Scale adjustment. (Output polarity will depend on application and jumper settings.)
- 5. For in-process switch-piont adjustments, use Fine Zero.

Resolution:	7µinch RMS *†		
C1-C Probe, Standard Range	108nm RMS		
Bandwidth:	Up to 15kHz (-3dB) *		
Maximum Zero Drift:	0.02%F.S./°F *		
	0.04%F.S./°C		
Output Voltage:	±10VDC		
Output Impedance:	0 Ohms		
Switched Output:	NPN or PNP Open Collector		
	200mA maximum		
Operating Temperature Range:	40°F-120°F		
	4°C-50°C		
Drive Frequency:	1MHz		
Input Power:	±15VDC ±10%		
	115VAC		
	240VAC†		
*Dependent on probe type and range			
<sup>†</sup> For maximum resolution, switching power supplies should have a switching			
frequency over 100kHz.			

#### **Mechanical Specifications**

