

# AIR BEARING C-LVDT USER'S GUIDE

**Capacitive LVDT-Type Contact Sensor** 

Oakdale, MN, USA www.lionprecision.com 651-484-6544

www.lionprecision.com/two-year-warranty/

Document No. M015-9450.021

## **TABLE OF CONTENTS**

| AIR-BEARING C-LVDT: CAPACITIVE LVDT -TYPE CONTACT SENSOR | 3 |
|--|---|
| Contact Force Adjustment                                 | 3 |
| Air Exhaust  | 3 |
| Specifications   | 3 |
| AIR-BEARING C-LVDT: MECHANICAL DETAIL                    | 4 |

Oakdale, MN, USA www.lionprecision.com 651-484-6544

## AIR-BEARING C-LVDT: CAPACITIVE LVDT -TYPE CONTACT SENSOR

The Air-Bearing C-LVDT converts a capacitive sensor using a standard capacitive probe into a high-precision contact displacement sensor similar to an LVDT. The capacitive probe is installed in the top of the C-LVDT body where it measures the location of a target connected on the inside end of the stylus. The C-LVDT uses a linear air-bearing for nearly friction-free movement of the stylus, and the porous carbon air bearing is square to prevent stylus rotation. Adjustable air pressure for extending the stylus provides for contact forces less than one gram, and the C-LVDT features a retraction port through which application of air pressure will retract the stylus.

The C-LVDT uses an interchangeable diamond tip. Diamond has been selected over ruby for the following reasons:

- Low Friction Side forces cause less lateral deflection from moving targets and less hysteresis on direction reversal.
- Highly Polished Surface Diamond accepts and holds a high polish, minimizing the possibility of scratching the measured surface.
- Minimal Wear Increased accuracy and longer life.

## **Contact Force Adjustment**

There is a contact force adjustment screw located on the end of the probe body near the cable exit. Use a 1/16" hex key to turn the adjustment clockwise to increase the contact force or counter clockwise to decrease it. Contact force is also a function of the air pressure applied to the C-LVDT. To maintain constant contact force, supplied air pressure must be held constant.

### Air Exhaust


The 0.1" slot around the body near the top of the C-LVDT is where air is exhausted. Do not clamp the C-LVDT over this ring. The ring must remain at least partially clear at all times for proper operation of the C-LVDT.

### **Specifications**

| Measurement Range      | 0.5 mm, 0.020 inch                                    |
|------------------------|---|
| Contact Force          | 0.2 g to 100 g  |
| Radial Stiffness       | < 0.25 µm/g   |
| Bearing                | Linear, porous air bearing                            |
| Diamond Tip            | Radius: 3.175 mm, 0.125 inch<br>Mount: 4-48AGD Thread |
| Weight of Moving Mass  | 4.2 g   |
| Air Connection         | 1/16 inch ID flexible tubing                          |
| Air Consumption        | 3-7 lpm, 0.10-0.25 cfm                                |
| Operating Air Pressure | 420-480 kPa, 60-70 psi                                |
| Air Requirement        | Dry, filtered to less than 5 µm particle size         |

Oakdale, MN, USA www.lionprecision.com 651-484-6544

# **AIR-BEARING C-LVDT: MECHANICAL DETAIL**

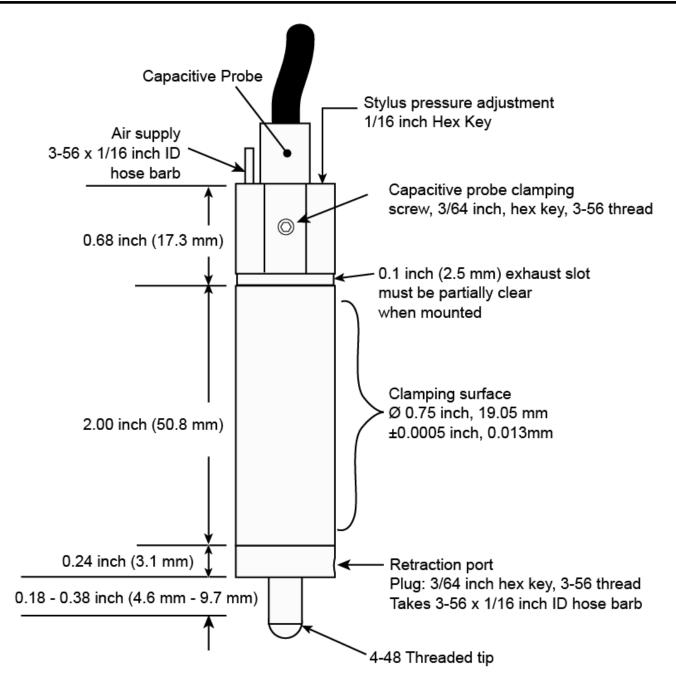

Be confident when you do business with Lion Precision

Oakdale, MN, USA www.lionprecision.com 651-484-6544

www.lionprecision.com/two-year-warranty/

Document No. M015-9450.021